



Quality European Fencing Equipment!

The Official U.S. Dealer of PBT Equipment
2910 Selwyn Ave. #274
Charlotte, NC 28209
1-800-422-4PBT (4728)
www.fencepbt.com

Operating Instructions for 45-PBTSGGY

Button Translation:

Fleuret/Epee = Foil or Epee selection

Automatique/Manuel = Automatic or Manual light reset selection

En Marche/Appereil = On or Off selection

Rearmement = If the machine is set to manual light reset you must press this button to manually rearm the machine/reset the lights.

The 2003 model will have an unmarked black button on the rear of the machine. This button is for switching the speaker between two tone modes. This can be used if there are two or more machines in a room to differentiate between the two machines audibly.

Normal Operation:

Normally the machine is set to the automatic mode and then turned on by placing the on/off button in the En Marche position. Then make your selection for foil or epee. While fencing foil you can flip the foil button from fleuret to epee in between bouts to turn off the white lights. It may take a few seconds to cycle the lights off. Just remember to flip the button back to fleuret before testing lames. It is normal when the machine is first turned on for lights to appear. The machine has a memory and will usually recall the last light sequence that appeared prior to turning the machine off.

Fuses

Machine - 3.15 amp

Power Transformer - 0.630 amp

If your machine does not work the first thing to check is the fuse in the power transformer. If this does not fix the machine then check the fuse located inside the machine. This fuse requires opening of the case. It is located next to the circuit board. There is a photo of the fuse's location on our website. Check the scoring machine's listing for the photo. If you cannot locate the fuses at a local store give us a call.